


SIDELINE

Fitting Instructions




DK5001, DB5001, DK5011, DB5011


1

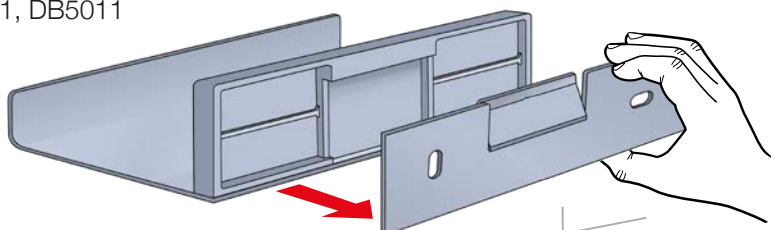


2

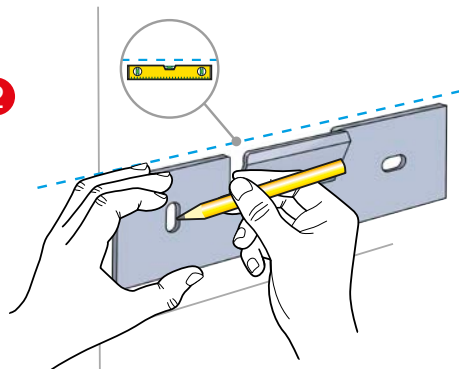

3

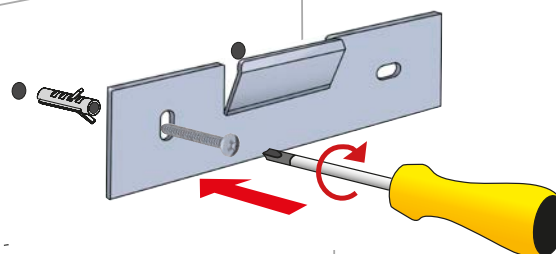


4

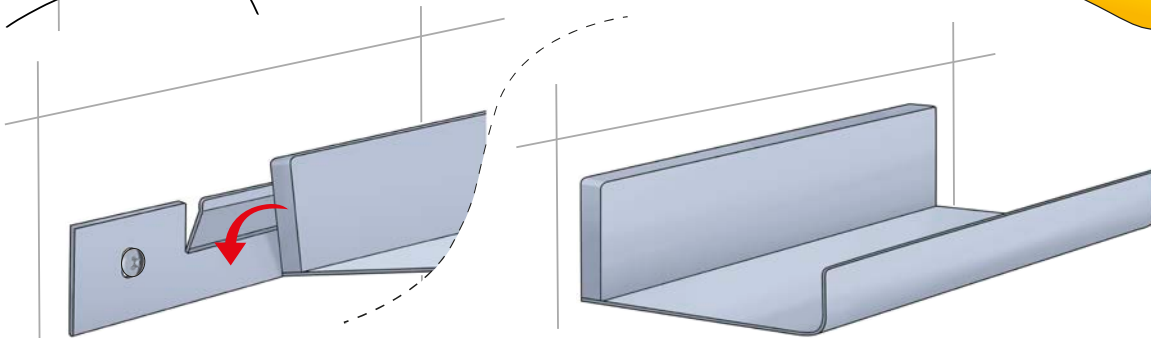


DK5001, DB5001, DK5011, DB5011

1

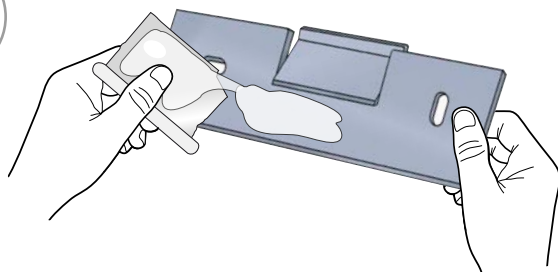

2

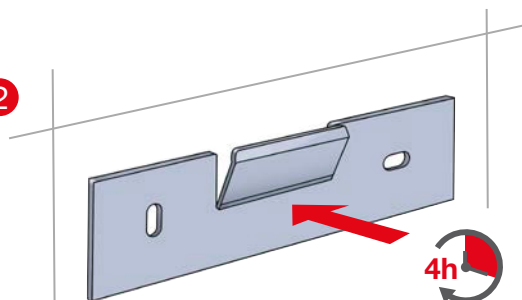

! EN We recommend i.Composite GlueMix. Carefully clean the surface to be glued. It is important to follow the glue manufacturer's instructions. See also attached mounting instructions. Not recommended for mounting on any wallpaper. Glue to be bought separately.